

### Step 1

Cut out the 50Hz strobe disc along the dotted line and poke a hole in the center using a pencil or pen.

(The 60Hz strobe disc is also provided for those who want one, but you'll likely get better results using the 50Hz disc with the True Note app.)

### Step 2

Place the 50Hz strobe disc onto your record player's platter, and start it at the 33 1/3 RPM speed.

### Step 3

In the True Note iOS app, make sure the 50Hz setting is selected and press the "START" button.

Shine the flashing LED light onto the strobe disc.

If you can make out the individual lines and they appear to stay in the same position (not drifting in one direction), then your record player is playing at the correct speed.

For additional instructions and troubleshooting help, tap the "?" button in the True Note app.

